




#### Uniqe characteristics

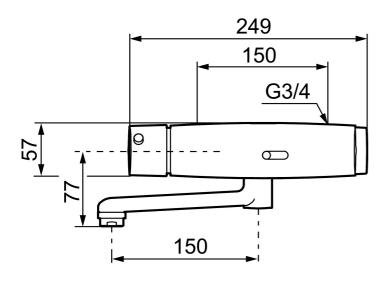

## MORA tronic WMS basin mixer, battery operation

Article number: 720313.DB Flow 3 bar: 5.0 l/m **Description:** Chrome, incl. s-connection (2x701001)

- WMS-mixers with possibilities of wireless connection (subscription is required)
- Adjustable hygiene flushing, intervals and rinsing time (to avoid stagnant water)
- Logging of all flushings with point of time, water consumption and temperature for individual mixer or group of mixers (minimum, maximum and average values)
- · Battery monitoring
- Built-in temperature measurements of mixed water temperature
- Programmable temperature stop, the mixer will turn off directly at set maximum temperature
- With mixing valve (but also provides cold drinking water as well as hot water only)
- With self-draining spout
- · Soft closing solenoid valve
- · Safe against vandalism, complete in metal
- Eco (energy and water saving constant flow aerator, 5 l/min at 200–600 kPa)
- The mixer is activated by holding a hand in front of the sensor eye. Once started the mixer will run for 10 seconds, but can be turned off manually by holding a hand in front of the sensor again
- Flush Timeout safety shut-off to prevent flooding, maximum of 30 seconds
- 30 sec. rinse time via sensor
- Can be turned off by solenoid valve (eg for cleaning)
- · Low power consumption Long life
- · Equipped with system for thermal disinfection against legionella
- · Battery operation, can be converted to mains operation
- IP class sensor, IP67
- Approved non-return valves, EN-Standard EN1717

#### Installation:



- Note! Gateway and a subscription is required for WMS
- · Automatic sensor calibration
- Easy to change battery, without turning off the water supply
- Mains operation requires installation of the AC adapter art.no. S600132 and power supply art.no. S600129, alternatively transformer art.no. S600128

#### Settings:


- · Adjustable max temperature
- With Gateway and WMS:
  - Hygiene flushing with adjustable time and intervals
  - Initiate hot water rinsing
  - Programming of rinsing times, temperature alarm och temperature stops
  - Alert signal if exceeding the time limit for stagnant water (the latest flushing)



### PRODUCT DESCRIPTION

# MORA tronic WMS basin mixer, battery operation

Article number: 720313.DB

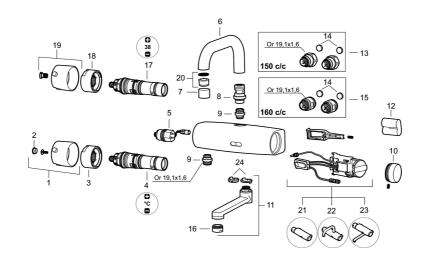

| Sparepartlist |           |         |   |  |
|---------------|-----------|---------|---|--|
| NO.           | ART NO.   | RSK     | DESCRIPTION                                       |  |
| 1             | 209611.AE |         | On/off handle, complete (for basin mixer)         |  |
| 2             | 409373.AE |         | End cover   |  |
| 3             | 209610.AE |         | Stop ring (for basin mixer)                       |  |
| 4             | 729555    |         | Mixing valve (for basin mixer), Lead Free         |  |
| 4             | 16280100  |         | Mixing valve (for basin mixer)                    |  |
| 5             | 729455.AE | 8553561 | Solenoid valve                                    |  |
| 6             | 209608    |         | Spout   |  |
| 7             | 131410.AE | 8281509 | Housing M22 int.                                  |  |
| 8             | 209607.AE |         | Nipple  |  |
| 9             | 409365.AE | 8187026 | Nipple M18x1 - G1/2                               |  |
| 10            | 729459.AE |         | Cover plug for battery, black                     |  |
| 11            | 459558    |         | Spout   |  |
| 12            | S600135   | 8483191 | Battery   |  |
| 13            | 209605.AE |         | Inlet connectors 150 c/c (left-handed thread)     |  |
| 14            | 209604.AE |         | Filters, 2 pcs                                    |  |
| 15            | 209606.AE |         | Inlet connectors 160 c/c                          |  |
| 16            | 131356.AE | 8281499 | Aerator M24 ext.                                  |  |
| 17            | 729556    |         | Termostatic unit (for shower- and hospital mixer) |  |
| 18            | 209620.AE |         | Stop ring (for shower- and hospital mixer)        |  |



| NO. | ART NO.   | RSK     | DESCRIPTION  |
|-----|-----------|---------|--|
| 19  | 209621.AE |         | On/off handle, complete (for shower- and hospital mixer) |
| 20  | 132205.AE | 8281441 | Aerator insert, 5 l/min at 200–600 kPa                   |
| 21  | 729462.AE |         | Electronic unit WMS (for shower mixer)                   |
| 22  | 729463.AE |         | Electronic unit WMS (for mixer with overhead spout)      |
| 23  | 729464.AE |         | Electronic unit WMS (for mixer with underlaying spout)   |
| 24  | 729467.AE |         | Limitation segment (for mixer with underlying spout)     |